

Hold **Fn** while pressing the other key. Right Alt and Right Ctrl mean the keys on the right-hand side.

EVERYDAY KEYS

F1 to F10	Fn + 1 through 0
F11 / F12	Fn + - / Fn + =
Grave / tilde key	Tap Fn + Esc
Home / End	Fn + K / Fn + L
Print Screen	Fn + I
Scroll Lock	Fn + O
Pause / Break	Fn + P
Windows key lock / unlock	Fn + Win
Windows mode / Mac mode	Fn + A / Fn + S

LIGHTING

Lights on / off	Fn + Space
Change lighting pattern	Fn + Right Alt
Change colour	Fn + Right Ctrl
Brightness up / down	Fn + Up / Down
Effect faster / slower	Fn + Right / Left

Factory reset Hold Fn + Esc for 3 s

Erases custom settings. Do not hold Fn + Esc unless you intend to reset. Colour and speed controls depend on the selected effect.

USB wired connection. For configuration software, key remapping, Rapid Trigger settings or support, contact bespored.co.za. Default shortcuts can change with custom key assignments.